



6. When the screen appears the previous old value (KM), press button **E** to enter a new value for the next Oil Service interval by using  $\uparrow$   $\downarrow$  keys to reach the value, then press button **E** again for confirmation of the new Oil Service interval.

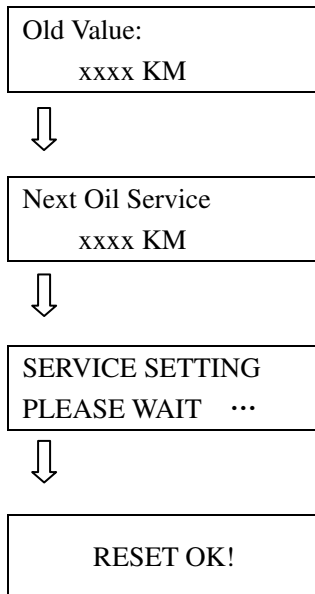

**Note:** Press  $\uparrow$   $\downarrow$  key one time for plus or minus 1,000 KM.  
The maximum is up to 255,000 KM.  
To Rest Inspection I Distance use channel 6 or 11.

7. Press button **R** to return to the Channel Number select screen for other functions selection.

- For Inspection I Distance:

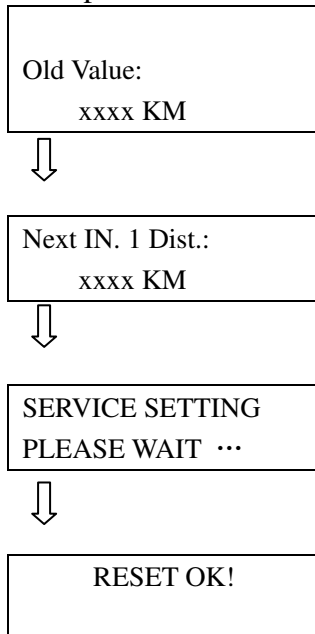

**Note:** Press  $\uparrow$   $\downarrow$  key one time for plus or minus 1,000 KM.  
The maximum is up to 255,000 KM.

To Reset Inspection I Time use channel To:12.